



Completely read all the instructions before installation
Improper installation will void warranty!

Step 1



Tools needed:
10mm Socket
Trim Pin Remover
Wire Splice Connectors

Step 2



Locate the two trim pins on the lower headlight trim panel and remove the two pins

Step 3



Remove the lower headlight trim panel

Step 4



Remove the 10mm screw located at the bottom of the headlight housing

Step 5



Remove the two 10mm screws located at the top of the headlight housing

Step 6



Remove the headlight by unplugging the power source and each of the three light bulb harnesses

Step 7



Remove the headlights

Step 8



Remove the Anzo headlights out of its box

Step 9



Connect the red wire from the Anzo headlight to the red wire from the the inverter

Step 10



Connect the red wire from the Anzo headlight to the black wire from the the inverter

Step 11



Connect the two wires from step 9 to the red wire from the parking light by using the wire splice connector

Step 12



Connect the two wires from step 10 to the black wire from the parking light by using the wire splice connector

Step 13



Install the Anzo headlights by reversing the steps 2 to 6

Step 14



Test all functions before operating the vehicle

AnzoUSA™ products are covered, by a limited one (1) year warranty, to be free of manufacturer's defects. However, certain AnzoUSA™ product categories have warranty policies which differ from this standard, please contact your representative for detailed category information. Damage due to improper installation or road hazards is not covered. Seller and manufacturers' only obligations shall be to replace the product proven to be defective. Neither seller nor manufacturer shall be liable for any injury, loss or damage, direct or consequential, arising out of the use of or the inability to use the product. Before using, user shall determine the suitability of the product for its intended use, and user assumes all risk and liability whatsoever in connection therewith.

]

3

to