




### Pillar installation Directions:

#### Read directions before starting installation

- 1) Remove Stock Pillar by removing the two screws located under the caps of pillar handle. (Photo1)
- 2) Install gauge in new pillar.
- 3) Peel back strip to expose adhesive from one side of Velcro and attach to the recessed area of the mount where the Attitude fits.
- 4) Expose adhesive and install Attitude mount. Press firmly to engage adhesive to back of Display **(DO NOT PRESS ON LCD)**
- 5) Tape or secure gauge wiring to back of pillar. (Photo 2)
- 6) Install new pillar in place of old pillar.
- 7) Use provided screw to hold pillar in place:
  - Make sure screw is aligned with factory hole to avoid cross threading
  - Don't over tighten screw (Photo 3)



(Photo 1)

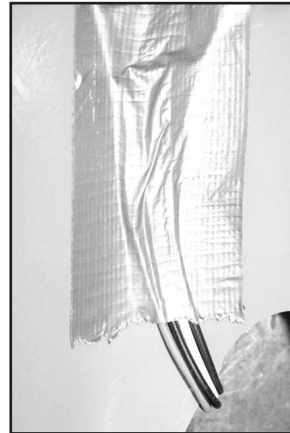

(Photo 2)



(Photo 3)

### Auto Meter Gauge Works Three Year Limited Warranty

Gauge Works warrants to the consumer that all Auto Meter Gauge Works products will be free from defects in material and workmanship. Products that fail will be repaired or replaced at Auto Meter Gauge Works' option to the consumer, when determined by Auto Meter Gauge Works that the product failed due to defects in material or workmanship. This warranty is limited to the repair or replacement of parts in the Auto Meter Gauge Works Product and the necessary labor done by Auto Meter Gauge Works to effect the repair or replacement of the Auto Meter Gauge Works product. In no event shall this warranty exceed the original purchase price of the Auto Meter Gauge Works product nor shall Auto Meter Gauge Works be responsible for special, incidental or consequential damages or costs incurred due to the failure of this product. Warranty claims to Auto Meter Gauge Works must be transportation prepaid and accompanied with proof of purchase. This warranty applies only to the original purchaser of product and is non-transferable. Improper use or installation, accident, water damage, abuse, unauthorized repairs or alterations voids this warranty. Auto Meter Gauge Works disclaims any liability for consequential damages due to breach of any written or implied warranty on all products manufactured by Auto Meter Gauge Works. This warranty is made solely by Gauge Works with Auto Meter being the agent to contact for warranty claims. If the partnership between Auto Meter and Gauge Works dissolves, then all warranty adjustments will be covered by the Gauge Works Co.

FOR SERVICE CONTACT: AUTO METER PRODUCTS Inc. 413 W. Elm St., Sycamore, IL 60178 USA (815)899-0801 or

© 2006 Auto Meter Products, Inc.

Email us at [service@autometer.com](mailto:service@autometer.com)

2650-1147 04/21/06




### Pillar installation Directions:

#### Read directions before starting installation

- 1) Remove Stock Pillar by removing the two screws located under the caps of pillar handle. (Photo1)
- 2) Install gauge in new pillar.
- 3) Peel back strip to expose adhesive from one side of Velcro and attach to the recessed area of the mount where the Attitude fits.
- 4) Expose adhesive and install Attitude mount. Press firmly to engage adhesive to back of Display **(DO NOT PRESS ON LCD)**
- 5) Tape or secure gauge wiring to back of pillar. (Photo 2)
- 6) Install new pillar in place of old pillar.
- 7) Use provided screw to hold pillar in place:
  - Make sure screw is aligned with factory hole to avoid cross threading
  - Don't over tighten screw (Photo 3)



(Photo 1)

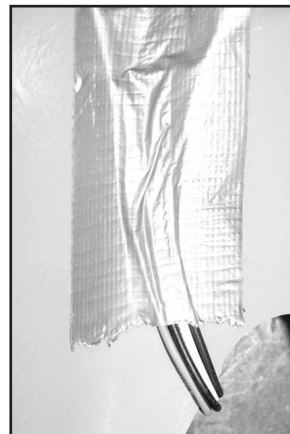

(Photo 2)



(Photo 3)

### Auto Meter Gauge Works Three Year Limited Warranty

Gauge Works warrants to the consumer that all Auto Meter Gauge Works products will be free from defects in material and workmanship. Products that fail will be repaired or replaced at Auto Meter Gauge Works' option to the consumer, when determined by Auto Meter Gauge Works that the product failed due to defects in material or workmanship. This warranty is limited to the repair or replacement of parts in the Auto Meter Gauge Works Product and the necessary labor done by Auto Meter Gauge Works to effect the repair or replacement of the Auto Meter Gauge Works product. In no event shall this warranty exceed the original purchase price of the Auto Meter Gauge Works product nor shall Auto Meter Gauge Works be responsible for special, incidental or consequential damages or costs incurred due to the failure of this product. Warranty claims to Auto Meter Gauge Works must be transportation prepaid and accompanied with proof of purchase. This warranty applies only to the original purchaser of product and is non-transferable. Improper use or installation, accident, water damage, abuse, unauthorized repairs or alterations voids this warranty. Auto Meter Gauge Works disclaims any liability for consequential damages due to breach of any written or implied warranty on all products manufactured by Auto Meter Gauge Works. This warranty is made solely by Gauge Works with Auto Meter being the agent to contact for warranty claims. If the partnership between Auto Meter and Gauge Works dissolves, then all warranty adjustments will be covered by the Gauge Works Co.

FOR SERVICE CONTACT: AUTO METER PRODUCTS Inc. 413 W. Elm St., Sycamore, IL 60178 USA (815)899-0801 or

© 2006 Auto Meter Products, Inc.

Email us at [service@autometer.com](mailto:service@autometer.com)

2650-1147 04/21/06