



# INSTALLATION INSTRUCTIONS

## Part Number: TB-1016

This filter fits: SEE CATALOG FOR CURRENT APPLICATIONS

\* FREE K&N® decal To register your warranty, please see us online at [knfilters.com/register](http://knfilters.com/register). FREE K&N® decal \*

Congratulations, you have purchased the finest air filter that money can buy. With proper care, this filter can last many seasons. This filter can be used in a stock machine, with no modifications required. If any engine modifications have been made tuning/jetting adjustments may be required. There are special installation instructions, so please follow the procedures outlined below to ensure the K&N® air filter seals properly.

**If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.**

### INSTALLATION:

1. Remove stock air filter.
2. Clean any sealing surfaces from any dust or debris that may be present.
3. Using supplied K&N® sealing grease, apply a small bead of grease in the air box, where the halves of the air box come together. This will ensure that the K&N® air filter will seal over the gap in the air box where the air box matting surfaces come together. See Fig. 1
4. Before installing K&N® air filter into air box, apply a small bead of grease to the perimeter of the sealing surface of the K&N® air filter. See Fig. 2
5. Install K&N® air filter.

**THESE INSTRUCTIONS MUST BE FOLLOWED EVERY TIME THE FILTER IS SERVICED, OTHERWISE THE FILTER MAY NOT SEAL, AND DAMAGE TO THE ENGINE COULD RESULT.**



Left side of air box

Right side of air box

Fig.1



Fig.2

### CLEANING:

K&N Engineering, Inc., suggests checking the air filter element periodically for excessive dirt build-up. Depending on your driving conditions, we recommend cleaning your air filter every 50,000 miles. To clean and re-oil, purchase our filter Recharger® service kit, part number 99-5050 or 99-5000 and follow the easy instructions.