




**MPFI SPACER KIT**  
FITS 1992-2002 DODGE RAM V10  
2571 TORQUE CURVE MPFI SPACER  
2671 WIDE OPEN MPFI SPACER  
2771 SMOOTH BORE MPFI SPACER

## INSTALLATION INSTRUCTIONS

**Important! Read all instructions before you begin installation.**

<b><u>PART LIST</u></b>		<b><u>TOOL LIST</u></b>
1 - Trans-Dapt Spacer	4 - 5/16"-18 Thin Lock Nuts	1/2" Socket
2 - Gaskets	11 - 5/16" Washers	11mm Socket
4 - 5/16"-18 X 5 1/2" Studs	3 - Linkage Plates	1/2" Box Wrench
4 - 5/16"-18 Lock Nuts	3 - 5/16"-18 X 3/4" Bolts	Standard Screwdriver

1. Disconnect negative (-) Battery Cable.
2. Remove air cleaner assembly, (4) nuts using 11mm socket.
3. Remove accelerator arm from the throttle body.
4. Remove (4) nuts attaching the throttle body.
5. Remove existing studs.
6. Remove the throttle linkage bracket and (3) bolts. **(Ref. "B")**
7. Install the Trans-Dapt spacer with (2) gaskets using (4) 5/16" **thin nuts** and washers.
  - A. Place one gasket between the throttle body and Trans-Dapt Spacer.
  - B. Place second gasket between Trans-Dapt Spacer and intake manifold.
8. Install (3) linkage plates using existing bolts. **(Ref. "B")**
9. Reinstall linkage bracket using (3) 5/16" x 3/4" bolts and washers.
10. Attach the throttle accelerator arm to the throttle body. **Refer to Step 3.**
11. Inspect & Test throttle linkage for full open and closed travel before driving. Some cruise or kickdown cables may require adjustment. Please refer to your vehicles service manual for proper adjusting.
12. Reinstall air cleaner assembly using (4) washers and (4) 5/16" lock nuts.
13. Reinstall air cleaner complete. **Refer to Step 2.**
14. Reconnect the battery cable.

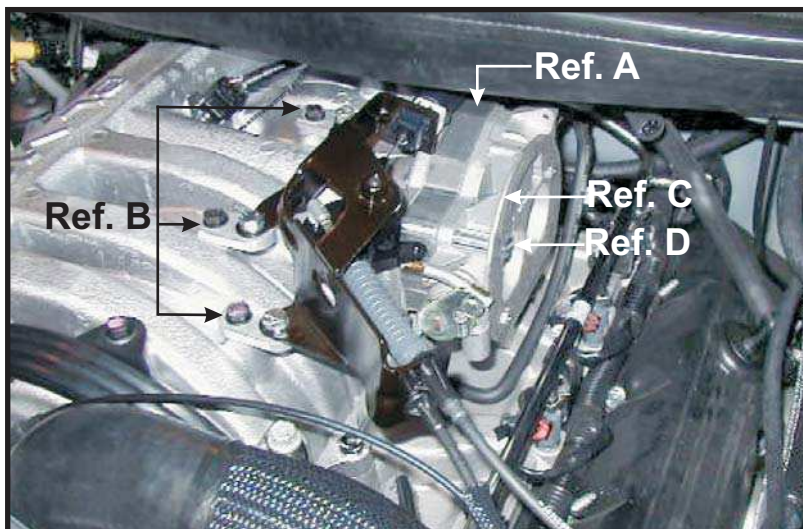

**Ref. A-** Trans-Dapt Throttle Body Spacer and 2 Gasket

**Ref. B-** (3) Linkage Plates, (3) 5/16"-18" x 3/4" Bolts, (3) 5/16" Washers

**Ref. C-** Throttle Body

**Ref. D-** (4) Studs, (4) Nuts, (4) Washers

12438 Putnam Street • Whittier, CA 90602 tel (562) 921-0404 • fax (562) 921-7515  
website: [www.tdperformance.com](http://www.tdperformance.com) • email: [techsupport@tdperformance.com](mailto:techsupport@tdperformance.com)

2571-2671-2771-instructionsheet-060506.cdr