



# BX1118

## 1997-02 Jeep Wrangler Installation Instructions

Please read **BOTH** these Installation Instructions and the General Towing Instructions before attempting to install or operate this equipment.

Serial Number

1. Blue Ox® towing products and accessories are intended to be installed by Blue Ox® Dealers who are familiar with our products and have the equipment and knowledge to do “fit work”. When necessary Blue Ox® Dealers can be found at [www.blueox.us](http://www.blueox.us) or by contacting our Customer Care Department at (402) 385-3051.

**Attachment Tab Height:** 15”

**Attachment Tab Width:** 24”

2. Many Blue Ox® Baseplates are designed to use existing holes and hardware to mount the baseplate to the towed vehicle. Even though bolts are there, do not assume they are adequate for baseplate mounting. Always use hardware supplied in the hardware kit or existing hardware specified in the Baseplate Towing Installation Instructions.

### Bolt Torque Specifications

Torque in Foot-Pounds for Metric Bolts

Bolt Size	Grade 8.8	Grade 10.9
6MM	6	8
8MM	16	22
10MM	31	40
12MM	54	70
14MM	89	117

Confirm the towability and pre-towing procedures for your vehicle with the owner’s manual or contact the vehicle’s manufacturer for specific towing procedures.

### Bolt Torque Specifications

Torque in Foot-Pounds for Inch Bolts

Bolt Size	Grade 5	Grade 8
1/4”	10	14
5/16”	19	29
3/8”	33	47
7/16”	54	78
1/2”	78	119
5/8”	154	230



## WARNING

Failure to read and follow these instructions could result in separation of the towed vehicle from the tow bar, causing property damage, loss of towed vehicle, personal injury or death.


BX1118  
1997-02 Jeep Wrangler  
Installation Instructions

## Parts List

Ref. No.	Qty.	Part #	Description
1	1	61-5624	Weldment, Baseplate, BX1118
2	4	201-0440	3/8-16 x 1 1/2" Hex Bolt, Grd. 5, ZP
3	4	203-0010	3/8" Lock Washer, ZP
4	2	203-0003	3/8" Flat Washer, ZP
5	4	61-5208	Weldment, 3/8-16, Nutplate, with 14" Wire
6	2	201-0553	1/4-20 x 1/2" Hx. Wshd, Type F Screw
7	2	202-0047	#10-32 Hex Nut
8	2	203-0054	#10 Lock Washer
9	2	201-0192	#10-32 x 1/2" Slot, Rd. Hd. Screw
10	2	101-5822	Adapter, 4 Way Connector
E	3	Existing	Bolts
	2	226-0046	Baseplate Safety Cable, 36" CL III (Not Shown)
	4	229-0359	Quicklink, 3/8, ZP (Not Shown)

## Tools Required

- 7MM Socket
- 16MM Socket
- 9/16" Socket
- 13/32" Socket
- Vise Grips
- Loctite® RED

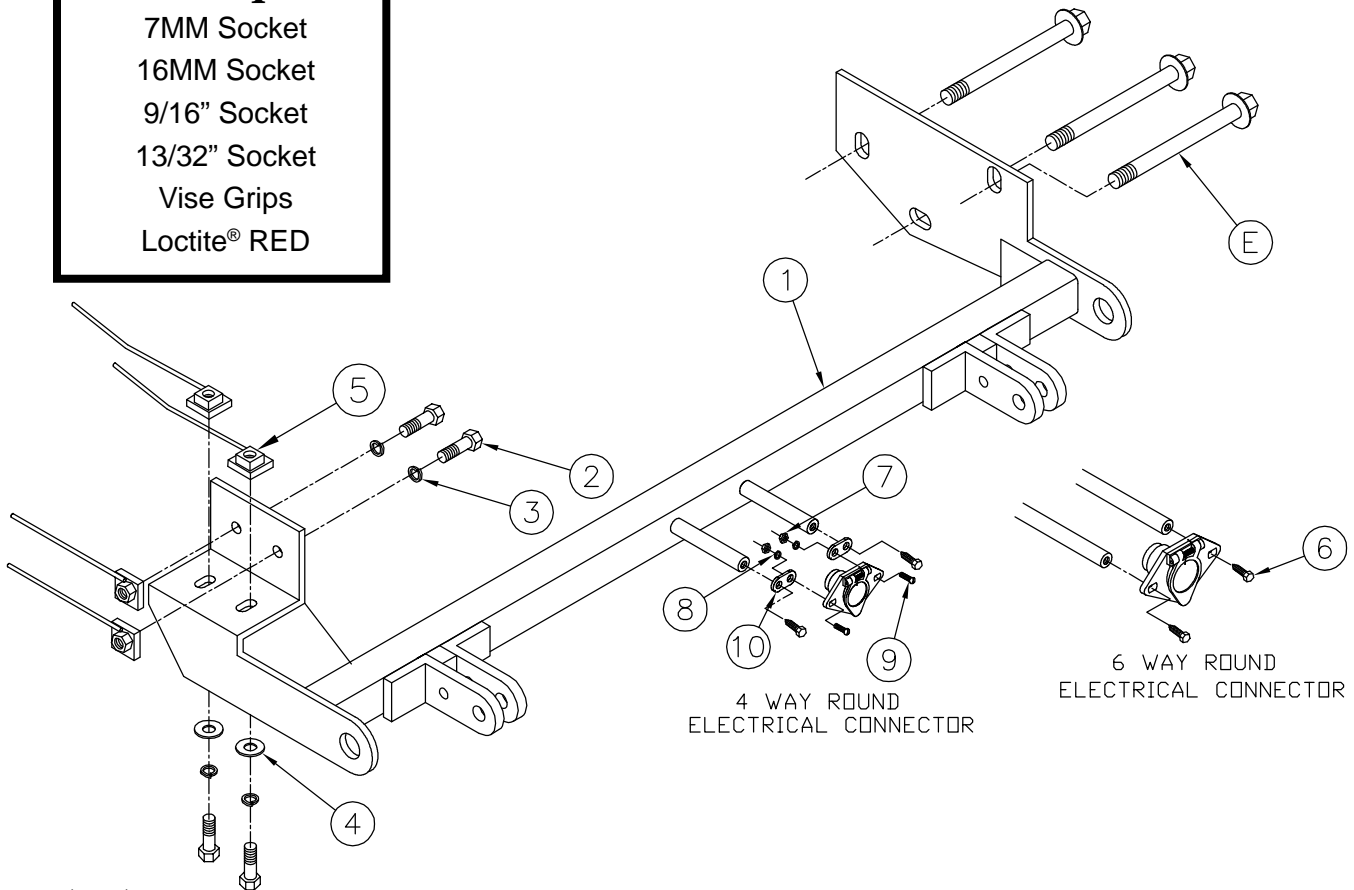

### Important:

Use only genuine factory replacement parts on your baseplate. Do **NOT** substitute homemade or non-typical parts. If a bolt is lost or in need of replacement, for your safety and the preservation of your baseplate, be sure to use a replacement bolt of the same grade (In most cases it will be Grade 5, please reference the parts list above). Replacement parts may be ordered through your nearest Blue Ox® Dealer or Distributor.

BX1118  
1997-02 Jeep Wrangler  
Installation Instructions

**Standard Tabs:**

To use certain adapters or a RangeFinder II tow bar in conjunction with standard tab baseplates an additional 5/16" hole must be drilled in the attachment tabs. The Ambassador tow bar will require an adapter for attachment tabs that are not 24" wide. The Adventurer tow bar will require an adapter for attachment tabs that are less than 24" wide. The Acclaim tow bar will not fold and store without the use of an adapter on vehicles with attachment tabs less than 24" wide.

**Instructions:**

Drilling is required.

The dimensional variations between otherwise identical vehicles can be considerable. While the baseplate was designed for easy installation, it may be necessary to tailor the baseplate slightly to compensate for auto manufacturer's tolerances. These minor adjustments may include filing a hole slightly, bending electrical rods, and/ or bending end plates.

The BX8869 Bulb and Socket Wiring Kit is recommended for this vehicle.

Below are illustrations on how to install the BX8869 Bulb and Socket Wiring Kit.



BX1118  
1997-02 Jeep Wrangler  
Installation Instructions



1. Using a 16MM socket, remove three (3) metric bolts, while having someone hold the gear box and the idler arm. Set the bolts aside to be reinstalled later.



2. Hold the baseplate into place and insert the three (3) existing bolts on the driver's side through the baseplate, frame, gear box, and tighten.



3. Clamp the passenger's side with the large vise grips. Using the baseplate as a template, drill four (4) holes using the 13/32" drill bit.



4. Using the 3/8"-16 x 1-1/2" hex bolts, 3/8" lock washers, and the 3/8"-16 nut plates, insert the nutplate into the frame and align with the holes. Tighten ALL bolts.

Install the tow bar and safety cables according to the instructions included in their packages.

Do **NOT** substitute other devices if the tow bar pin and clip are lost.

**BE SURE TO USE LOCTITE® RED ON ALL BOLTS BEFORE TIGHTENING. TIGHTEN ALL BOLTS ACCORDING TO THE TORQUE CHART ON THE FRONT PAGE OF THESE INSTRUCTIONS OR ON PAGE 3 OF THE BASEPLATE TOWING GENERAL INSTRUCTIONS.**

BX1118  
1997-02 Jeep Wrangler  
Installation Instructions

**CUSTOMER SERVICE COMMITMENT**

Be sure that **ALL** electrical connections are plugged in properly and functioning **BEFORE** Installing the fascia.

**DEALER or INSTALLER:**  
Be certain the user receives the instruction sheets for their products.



Blue Ox is committed to providing you with exceptional customer care throughout your lifetime with our products. Our team is here to assist you with any questions you may have regarding the performance of your product. Simply call 1-800-228-9289 and you can speak with our customer care team.

Additionally, please visit our website to see which rallies our Destination America team will be attending. For a nominal fee, our service technician will service your towing system to ensure it's in proper working condition. Also as a commitment to our customers, should you visit our factory you can stay at our full service Blue Ox campground at no charge along with enjoying a factory tour.

Again thank you for being our customer and for the confidence you have shown in the performance of our products. It is because of customers like you we enjoy the success we have today.



© 2005, 06, 07, 09 Blue Ox  
One Mill Road, Industrial Park  
Pender, Nebraska 68047  
Phone: (402) 385-3051  
Toll Free: (888) 425-5382  
Fax: (402) 385-3360  
[www.blueox.us](http://www.blueox.us)  
9/11/09