



In Channel
SNAP/INZTM
Sidewind Deflectors
INSTALLATION INSTRUCTIONS

This product must be installed at or above room temperature 68°- 72° F

BEFORE INSTALLATION:

- Trial fit the Sidewind Deflector to vehicle to ensure fit. Take note of where the adhesive will make contact.
- Clean window channels with glass cleaner. Allow cleaner to dry completely.
- Wipe the area where the adhesive strip will contact the window channel gasket with the alcohol pad provided. Allow the alcohol to dry completely.
- Apply the adhesive promoter to the areas where the adhesive will make contact, and allow to dry.


1 Insert the sidewind into the window channel:

While holding the front end of the sidewind into the channel with one hand, grasp the back end with your free hand and bow the sidewind out towards you. (fig 1) Continue inserting the flange on the top of the sidewind into the channel ending up at the top rear corner of the window frame. Push upward on the sidewind until it is firmly seated into the channel. (fig 2)

- ### **2**
- Carefully open and close the window several times to insure that the top flange on the sidewind is firmly and securely seated into the channel. With the window up push firmly on the outside of the gasket to insure the inside is securely fastened to the adhesive strip on the sidewind. Leave window closed for at least 24 hours for best results.

Repeat steps for passenger side window.

WARNING: Improper installation can result in damage to the sidewind and/or window/window mechanisms.

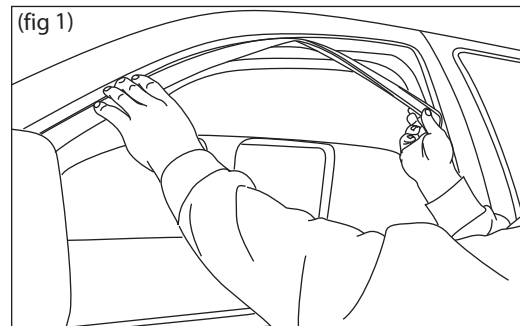

(fig 2)

