


# HOOD PROTECTOR INSTALLATION INSTRUCTIONS

- 1 LIFT THE HOOD AND REMOVE ANY DIRT OR DEBRIS.
- 2 LOCATE THE 2 CENTER HOLES ON THE UNDERSIDE OF THE HOOD THAT LINE UP WITH THE CENTER MOUNTING HOLES OF THE HOOD PROTECTOR. PLACE A PLASTIC INSERT INTO EACH OF THE HOLES.
- 3 USING THE ALCOHOL PADS FROM THE HARDWARE PACK CLEAN THE UNDERSIDE OF THE HOOD WHERE THE 4 ADHESIVE STRIPS ON THE HOOD PROTECTOR MOUNTING TABS WILL ADHERE TO THE HOOD.
- 4 CENTER THE HOOD PROTECTOR TO THE HOOD AND REMOVE THE RED BACKING FROM THE ADHESIVE STRIPS ON THE MOUNTING TABS. INSERT A SCREW WITH A SHOULDER WASHER THROUGH EACH OF THE HOLES AND TIGHTEN JUST ENOUGH TO HOLD THE HOOD PROTECTOR IN PLACE.
- 5 CLOSE THE HOOD CAREFULLY TO CHECK THE FIT. IF THE HOOD PROTECTOR IS NOT CENTERED, SLIGHTLY LOOSEN THE SCREWS AND MOVE IT TO ONE SIDE OR THE OTHER UNTIL CENTERED..
- 6 ATTACH SHOULDER WASHERS TO THE 2 SELF PIERCING SCREWS AND SECURE THE OUTSIDE EDGES OF THE HOOD PROTECTOR TO THE HOOD USING THE OUTER HOLES ON THE MOUNTING TABS.
- 7 APPLY FIRM PRESSURE TO THE MOUNTING TABS TO SECURE THE ADHESIVE TO THE HOOD. TIGHTEN THE SCREWS UNTIL SNUG **DO NOT OVER TIGHTEN** THIS MAY DAMAGE YOUR NEW HOOD PROTECTOR.

**CLEANING:** USE ONLY SOAPY WATER AND A SOFT CLOTH. NEVER USE PAPER TOWELS, PETROLEUM PRODUCTS OR SOLVENTS TO CLEAN YOUR HOOD PROTECTOR.

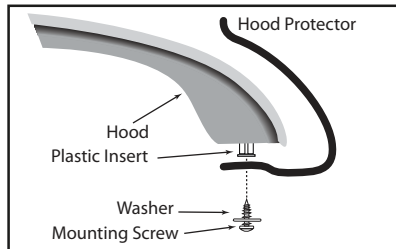

**KIT CONTAINS:**

HOOD PROTECTOR  
4 MOUNTING SCREWS  
4 SHOULDER WASHERS  
2 PLASTIC INSERTS  
ALCOHOL PADS

**TOOLS NEEDED:**

PHILLIPS SCREWDRIVER