


- 1 LIFT THE HOOD AND REMOVE ANY DIRT OR DEBRIS.
- 2 LOCATE THE 4 HOLES ON THE UNDERSIDE OF THE HOOD THAT LINE UP WITH THE MOUNTING HOLES OF THE HOOD PROTECTOR. PLACE A PLASTIC INSERT INTO EACH OF THE HOLES.
- 3 CENTER THE HOOD PROTECTOR TO THE HOOD AND INSERT A SCREW WITH A SHOULDER WASHER THROUGH EACH OF THE HOLES AND TIGHTEN JUST ENOUGH TO HOLD THE HOOD PROTECTOR IN PLACE.

- 4 **NOTE: If you are installing a CHROME HOOD PROTECTOR ONLY a rubber bump-on is required on this application to prevent damage to the hood.**

**Remove the adhesive backing from the rubber bump-on and adhere it on the hood centered left to right and 4" up from the front edge.**

- 5 CLOSE THE HOOD CAREFULLY TO CHECK THE FIT. IF THE HOOD PROTECTOR IS NOT CENTERED, SLIGHTLY LOOSEN THE SCREWS AND MOVE IT TO ONE SIDE OR THE OTHER UNTIL CENTERED..
- 6 WHEN THE HOOD PROTECTOR IS PROPERLY CENTERED, TIGHTEN THE SCREWS UNTIL SNUG **DO NOT OVER TIGHTEN** THIS MAY DAMAGE YOUR NEW HOOD PROTECTOR.

**CLEANING:** USE ONLY SOAPY WATER AND A SOFT CLOTH. NEVER USE PAPER TOWELS, PETROLEUM PRODUCTS OR SOLVENTS TO CLEAN YOUR HOOD PROTECTOR.

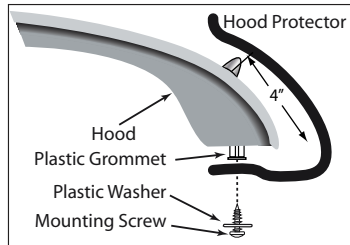

#### **KIT CONTAINS:**

HOOD PROTECTOR  
4 MOUNTING SCREWS  
4 SHOULDER WASHERS  
4 PLASTIC INSERTS  
1 RUBBER BUMP-ON\*

#### **TOOLS NEEDED:**

PHILLIPS SCREWDRIVER

*\*Chrome application only*