


# MSD<sup>®</sup> PRO-CRIMP<sup>™</sup> TOOL


## ASSEMBLY

Insert the dies into the jaws of the Pro-Crimp Tool but do not tighten the screws. Fully close the jaws of the Tool to align the dies then tighten the screws.

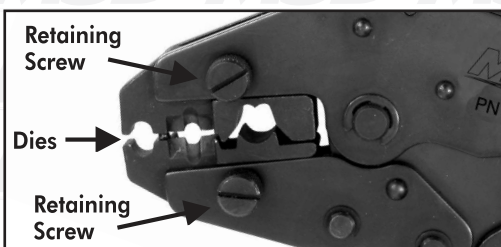

## TENSION ADJUSTMENTS

The MSD Pro-Crimp Tool features an adjustment that allows you to set the amount of tension felt at the end of a crimp. To adjust the tension:

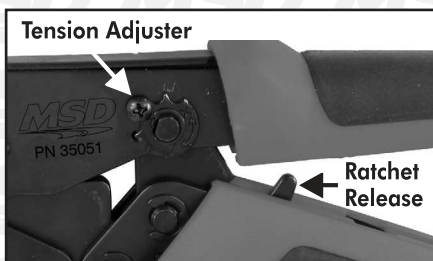

1. Remove the Phillips screw located to the right of the MSD logo.
2. Move the adjuster to the desired location. There is a (+) symbol for more tension and a (-) for less.
3. Install the screw to lock the adjustment in place.

## RATCHET RELEASE

If it is ever required to release the Pro-Crimp in the middle of a crimp, simply push the ratchet release lever forward.

## ADDITIONAL CRIMP DIES

MSD offers additional crimp dies to be used with the Pro-Crimp Tool. The supplied dies are designed specifically for MSD's Dual Crimp Terminals for spark plug wires. Additional dies are sold separately.

Replacement, Plug Wire . . . . .	.PN 3508
Amp Pin . . . . .	.PN 3506
Amp Lug Terminals. . . . .	.PN 3507
Weathertight Terminals . . . . .	.PN 3509
Deutsch Terminals . . . . .	.PN 3510

## SPARK PLUG WIRE ACCESSORIES

Straight Boots and Multi-Angle Terminals, 2/Card . . .	PN 3301
90° Spark Plug Boots/Terminals, 2/Card . . . . .	PN 3311
HEI Style 90° Boots/Terminals, 2/Card . . . . .	PN 3320
Distributor 90° Socket Boots/Terminals, 2/Card . . . .	PN 3321
Straight Dist. Socket Boots/Terminals, 2/Card . . . . .	PN 3322
Blaster 2 Coil Boot and Terminal, 1/Card . . . . .	PN 3331
HEI Style 90° Boots/Terminals, Kit of 9 . . . . .	PN 8849
90° Socket Boots/Terminals, Kit of 9 . . . . .	PN 8851
90° Spark Plug Boots/Terminals, Kit of 9 . . . . .	PN 8850
8.5mm Super Conductor Wire, 6 feet, Red . . . . .	.PN 34039
8.5mm Super Conductor Wire, 25 feet, Red . . . . .	.PN 34019
8.5mm Super Conductor Wire, 300 feet, Red . . . . .	.PN 34059

MSD offers an assortment of Deutsch and Weathertight connectors and terminals.

**WARNING:** This product contains a chemical known to the State of California to cause cancer and birth defects or other reproductive harm.



MSD, 1490 Henry Brennan Dr., El Paso, Texas 79936, (915) 857-5200

© 2015 MSD LLC

[WWW.MSDPERFORMANCE.COM](http://WWW.MSDPERFORMANCE.COM)